



# OPM120

## Optical Power Meter

User Guide \_ Version 1.0

**Ascentac**  
[www.ascentac.com](http://www.ascentac.com)

**T** +886-7-398-1000

**F** +886-7-398-3965

# Copyright

© Copyright 2025 Ascentac. All rights reserved.

No part of this publication may be reproduced, stored in a retrieval system or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without prior permission of Ascentac.

# Disclaimer

Ascentac shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this user guide.

The material in this document is subject to change without notice. For the latest information regarding this product, please visit our website at <http://www.ascentac.com>.

All other trademarks and registered trademarks which appear herein are for reference purposes only and are the property of their respective owners.

## Warranty

Ascentac warrants the product against defects in material and workmanship within (1) year from the date of delivery. Under normal use and service, the product will be free from physical defects in material and workmanship during the warranty period, or the product will be repaired or replaced as determined solely by Ascentac.

During the warranty period, you and Ascentac will pay the shipping costs for repairing products for one time respectively. Products returned without proof of purchase or with warranty expired will be repaired or replaced by Ascentac's decision. You shall pay the charges, including maintenance cost, shipping, insurance, duties, taxes, import fees or others which may be caused.

This warranty provides you with specific legal rights. You may have additional rights which may vary from state to state and country to country. Because of individual state and country regulations, some of the above limitations and exclusions may not apply to you.

If any of the following conditions take place, the warranty shall be null and void.

- Defects or malfunction caused by human factors, accident, improper use not conforming to product manual instructions, abuse or unauthorized alteration, modification or repair of the product.
- The label with S/N has been altered or damaged.

**Notice:** Ascentac makes no warranty of any kind with regard to the content in this document, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

## Service & Support

If you have any questions or need any assistance, please contact our service center.

TEL: +886-7-398-1000

FAX: +886-7-398-3965

Address: 9F.-6, No. 12, Fuxing 4th Rd., Qianzhen Dist., Kaohsiung City 806611, Taiwan (R.O.C.)

Please prepare the following information before you contact us and describe the problems.

- Product model and S/N
- Warranty information


# Content

1. Safety Information .....	1
2. Introduction.....	2
2.1 Features .....	3
2.2 Application .....	3
3. Layout .....	4
3.1 Appearance .....	4
3.2 Instruction .....	5
3.3 LED Indicator .....	6
4. Display .....	7
4.1 Optical Power Meter (OPM) .....	7
4.2 Visual Fault Locator (VFL) (Option) .....	7
5. Operation.....	8
5.1 Power-on .....	8
5.2 Power-off .....	8
5.3 Switching Function Modes .....	8
5.5 Turning on VFL (Option) .....	9
5.6 Turning off VFL (Option) .....	9
5.7 Setting VFL Modulation Output (Option) .....	10
5.8 Setting Wavelength .....	11
5.9 Setting Reference Value (Default: OFF) .....	12
5.10 Cancelling Reference Value.....	12
5.11 Setting Measurement Units (Default: dBm) .....	13
5.12 Optical Power Monitoring .....	14

5.13	Saving Measurement Result .....	15
5.14	Loading Measurement Result.....	17
5.15	Device Setting .....	19
5.15.1	Date .....	19
5.15.2	Time .....	20
5.15.3	Power Saving (Default: 10 mins) .....	21
5.15.4	Screen Saving (Default: 5 mins).....	22
5.15.5	Brightness (Default: Mid) .....	23
5.15.6	Battery Charge (Default: OFF).....	24
5.15.7	Low Power Thr. (Default: -30dBm) .....	25
5.15.8	Loss Thr. (Default: 3dB).....	26
5.15.9	Device Info.....	27

## 1. Safety Information

Read all safety information carefully before using this product to ensure personal safety and proper use.

- Assure the power supply conforming to the specification of this product and qualified for the country of use.
- Use batteries that meet the specifications of this product.
- Do not use damaged power cords, accessories or other peripheral equipment.
- Make sure the product is operated on the permitted ambient conditions.
- Never directly look into the optical outputs interface.
- Dangerous laser radiation: A yellow triangular warning symbol with a black border and a black laser beam icon inside.

## 2. Introduction

Ascentac OPM120 Series, Optical Power Meter, provides high accuracy for optical power measurement in fiber-optic network. It has a wide dynamic range from +6 to -70dBm or +26 to -50dBm. Offering seven calibrated wavelengths (850nm, 1300nm, 1310nm, 1490nm, 1550nm, 1625nm & 1650nm) makes it ideal for both singlemode and multi-mode fiber testing. Furthermore, its wavelength can be automatically selected when it is paired with Ascentac Optical Light source (OLS200). Technicians are not required to manually set up the calibration parameter. It speeds up the test and eliminates possible failures of setting.

Ascentac OPM120 Series also has the capacity to analyze the cable status. "Low Power" alarm reads on screen when the measured value is lower than the threshold users set up. Test results can be stored up to 1000 records and easily transferred to PC via USB connection.

Its interchangeable connectors (SC, FC, LC, Universal 2.5mm or 1.25mm) are dust-and-drop protected. All other common features like relative measurements and auto-shutdown are included.



## 2.1 Features

- 7 calibration wavelengths (850nm, 1300nm, 1310nm, 1490nm, 1550nm, 1625nm, 1650nm)
- Automatic wavelength recognition for time saving and error-free  
(Must use with Ascentac OLS200 or OLM300 series)
- Analysis of cable status e.g. Low Power (Displayed on screen)  
(Threshold can be set up)
- Document results and generate reports to PC via USB connection
- Generous data storage up to 1000 records
- Auto shutdown & backlight sleep mode for extending the battery life  
(Programmable)
- Option: Function of Visual Fault Locator with CW (Continuous Wavelength) or modulated tones at 1Hz or 2Hz

## 2.2 Application

- Optical power or loss measurement in telecom or CATV installation and maintenance


## 3. Layout

### 3.1 Appearance

- Front



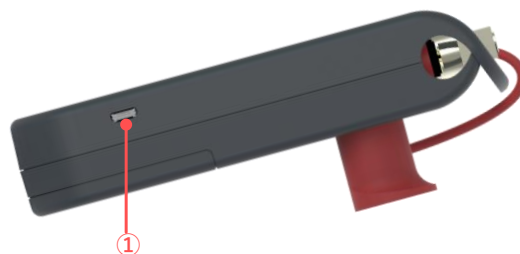

- Side



- Back



## 3.2 Instruction

Button	Function	Description
	Power on/off	Long press for two seconds to turn on/off the meter.
<b>LASER</b>	Laser on/off	Long press for two seconds to turn on/off the laser.
CW	VFL modulation output	Short press to switch modulation output. CW → 1Hz → 2Hz → CW
<b>MIN/MAX</b> <b>MEAS</b>	Record min. or max. value of optical power	Short press to record min. or max. value of optical power.
	Optical power monitoring	Long press for two seconds to turn on/off this function.
<b>MODE</b> <b>REF</b>	Mode switching	Short press to switch mode. OPM → VFL → OPM
	REF setting	Long press for two seconds to set reference value.
<b>dBm</b> <b>mW</b>	Measurement unit selection	Short press to switch measurement unit or cancel reference value.
<b>LOAD</b> <b>SAVE</b>	Data loading	Short press to load measurement results.
	Data saving	Long press for two seconds to save measurement results.
Power入	Wavelength selection	Short press to switch wavelength.
	Setting	Short press to access device setting.


Item	Function	Description
1	USB	1. Power supply 2. Charge rechargeable batteries 3. Transfer measured record to PC
2	OPM optical connector	SC, FC, LC, Universal 2.5mm or 1.25mm
3	VFL optical connector	Universal 2.5mm
4	Battery	Dry batteries or rechargeable batteries (Charged by USB connection): AAA-size x 4

### 3.3 LED Indicator


Item	LED Indicator	LED Status	Description
1	PASS/FAIL	Off	Without setting threshold
		Red	Setting threshold 1. Measured value of optical power is less than low power threshold. 2. With setting REF value, the loss value is higher than loss threshold.
		Green	Setting threshold 1. Measured value of optical power is equal to or higher than low power threshold. 2. With setting REF value, the loss value is equal to or less than loss threshold.
2	LASER	Off	No emitting light
		Red	Emitting light

## 4. Display

### 4.1 Optical Power Meter (OPM)

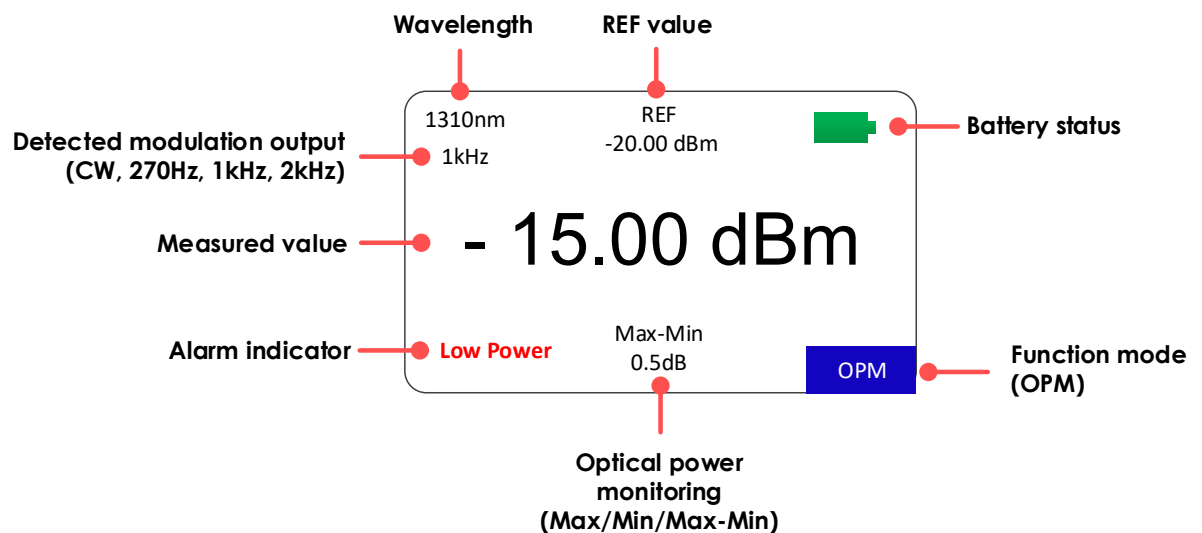

### 4.2 Visual Fault Locator (VFL) (Option)

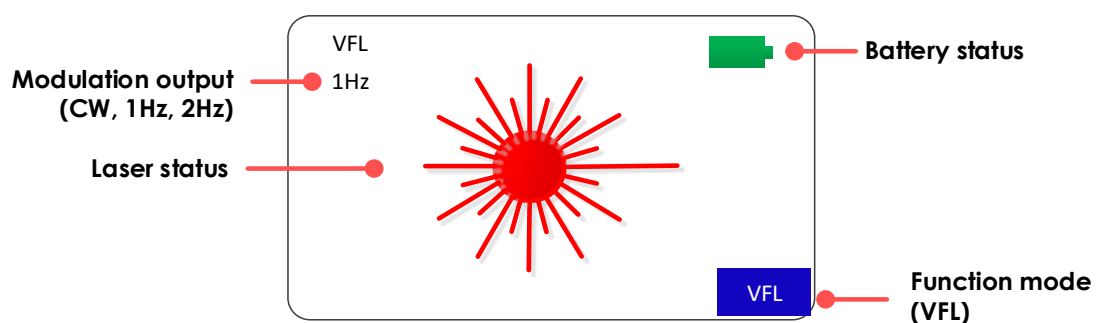


## 5. Operation

### 5.1 Power-on

Press [  ] key for two seconds to turn on the meter.

Startup screen → Enter into optical power measurement interface.

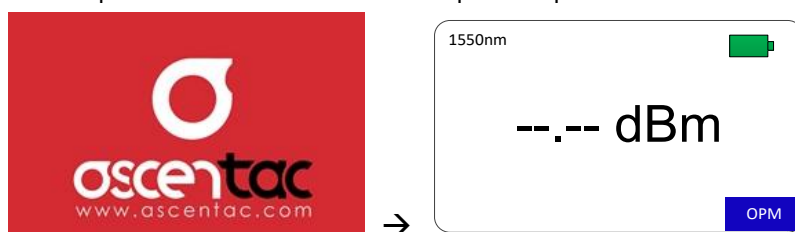


#### Note


"--.-- dBm" is displayed when there is no input of optical light source.

### 5.2 Power-off

Press [  ] key for two seconds to turn off the meter.

### 5.3 Switching Function Modes

Short press [  ] key to switch function modes.

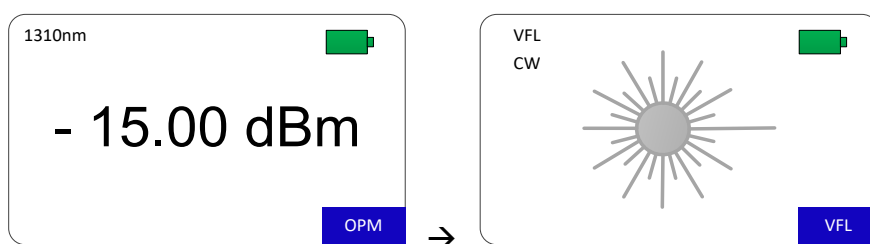


#### Note


[ **LASER** ] & [ **cw** ] key are not available in OPM mode.

## 5.5 Turning on VFL (Option)


1. Short press [ **MODE** / **REF** ] key to switch to VFL mode.

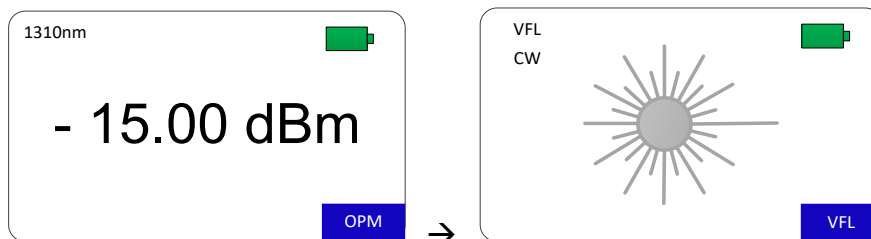

2. Press [ **LASER** ] key for two seconds to turn on VFL.

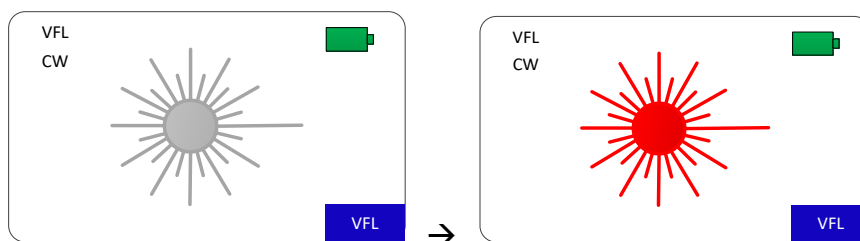


### Note


“  ” refers to emitting light.

## 5.6 Turning off VFL (Option)

Press [ **LASER** ] key for two seconds to turn off VFL.

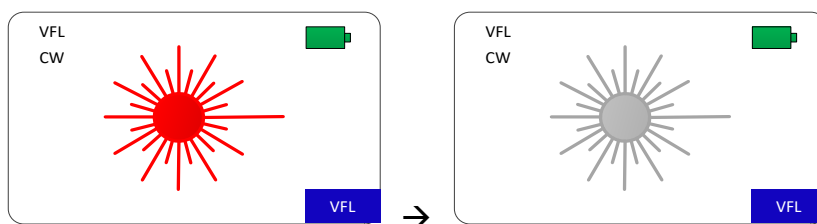

### Note

“  ” refers to no emitting light.

## 5.7 Setting VFL Modulation Output (Option)

Short press [ **CW** ] key repeatedly until the desired modulation output is displayed. (CW → 1Hz → 2Hz → CW)


### **Note**

Modulation output can't be selected by [ **CW** ] key if the current mode is OPM mode.




## 5.8 Setting Wavelength

1. Short press [**MODE**  
**REF**] key to switch to OPM mode.

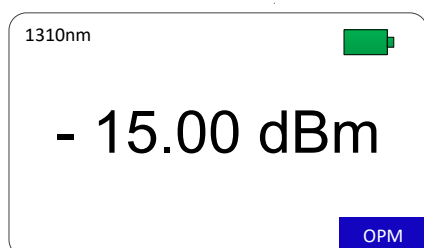


2. Short press [**Power**⏏] key repeatedly until the desired wavelength is displayed.

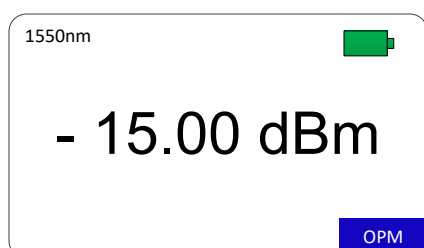

### Note

1. Wavelength can't be selected in VFL mode.
  2. [**CW**] key is not available in OPM mode.
3. OPM120 series can automatically recognize the wavelength if the modulation output of optical light source is 2kHz from Ascentac OLS200 or OLM300 series.

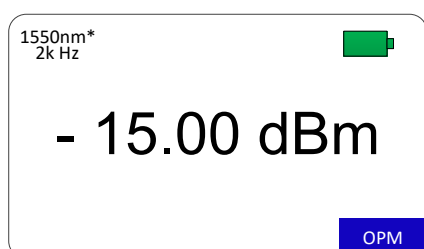


### Note


“\*” behind the wavelength refers to automatic wavelength recognition.

## 5.9 Setting Reference Value (Default: OFF)

1. Short press [ $\frac{\text{MODE}}{\text{REF}}$ ] key to switch to OPM mode.

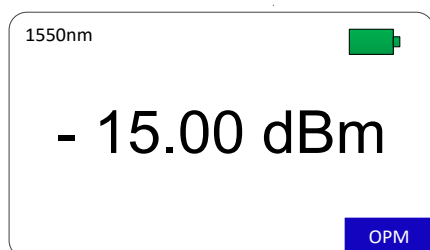

2. Long press [ $\frac{\text{MODE}}{\text{REF}}$ ] key for two seconds to set the reference value.

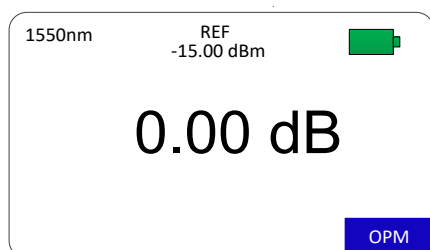


### Note

1. The measurement unit will be dB after setting the reference value.
2. The reference value can't be set in VFL mode.
3. Long press [ $\frac{\text{MODE}}{\text{REF}}$ ] key for two seconds under unit mW. The unit of REF value will be dBm. The unit on display is dB.


## 5.10 Cancelling Reference Value

Short press [ $\frac{\text{dBm}}{\text{mW}}$ ] key to cancel the reference value.

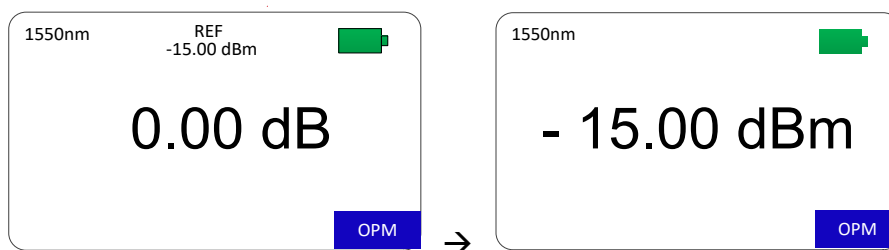


## 5.11 Setting Measurement Units (Default: dBm)

1. Short press [ $\frac{\text{MODE}}{\text{REF}}$ ] key to switch to OPM mode.

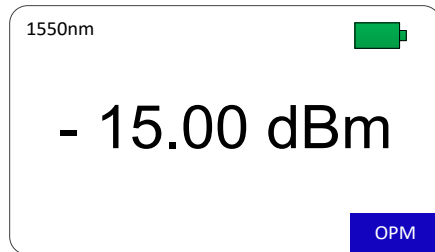

2. Short press [ $\frac{\text{dBm}}{\text{mW}}$ ] key to switch measurement units.

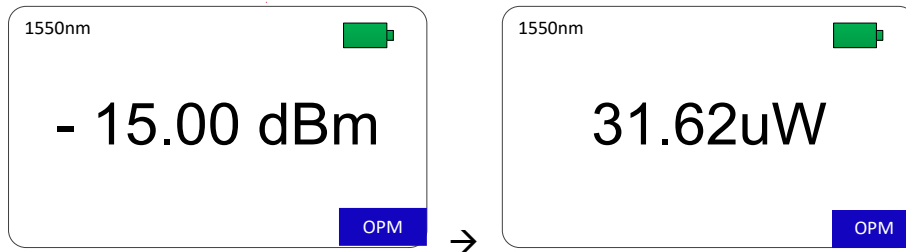


### Note


The measurement units can't be switched in VFL mode.

## 5.12 Optical Power Monitoring


1. On the display of optical power measurement, press [  $\frac{\text{MIN/MAX}}{\text{MEAS}}$  ] key for two seconds to access optical power monitoring.

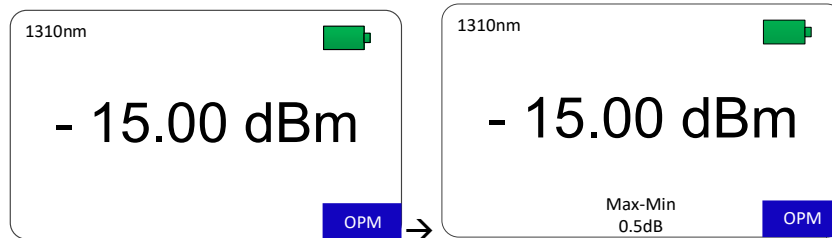


2. Short press [  $\frac{\text{MIN/MAX}}{\text{MEAS}}$  ] key to switch monitoring mode.
  - Monitoring mode: Max → Min → Max-Min → Max
  - Definition of monitoring mode:
    - Max: Record the maximum value of optical power.
    - Min: Record the minimum value of optical power.
    - Max-Min: Record the difference of the above value.
3. Long Press [  $\frac{\text{MIN/MAX}}{\text{MEAS}}$  ] key for two seconds to turn off monitoring mode.

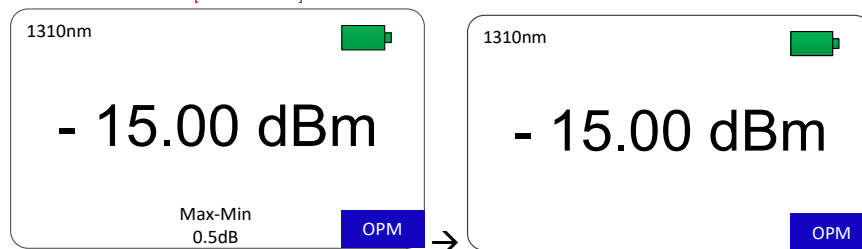

## 5.13 Saving Measurement Result

1. On the display of optical power measurement, long press [  ] key for two seconds to save measurement result. Press [↑] [↓] to select “Yes” and press [↵] to confirm it.

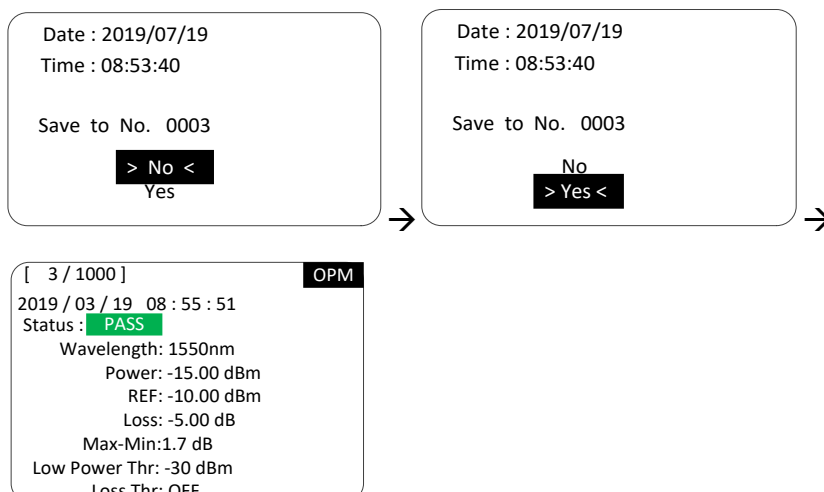

### Note


- Date: Refer to the saving date.
- Time: Refer to the saving time.
- Save to No.: Refer to data saving number.
- Status:
  - ----
  - Without setting Low Power Thr. & Loss Thr..
  - **PASS**  
Measured value of optical power  $\geq$  Low Power Thr.  
Measured value of loss  $\leq$  Loss Thr
  - **Low Power**  
Measured value of optical power  $<$  Threshold of low power
  - **Loss**  
Measured value of loss  $>$  Loss Thr.
- REF: Reference value can be saved if there is a reference value. However, the status of REF will be “OFF” if users don’t set reference value.
- Loss: If there is a reference value, loss value will be saved. If there is no reference value, the status of Loss will be “--.--”.


- MEAS: Without monitoring mode, the status of MEAS will be "OFF". With monitoring mode, the value will be displayed. (e.g., MAX-MIN: 1.7dB)
2. Press [↵] to save measurement result and return to the display of optical power measurement; press [ESC] to discard saving and return to the display of optical power measurement.

**Note**

Measurement result can't be saved in VFL mode.

## 5.14 Loading Measurement Result


1. On the display of optical power measurement, short press [  ] key to load measurement result.

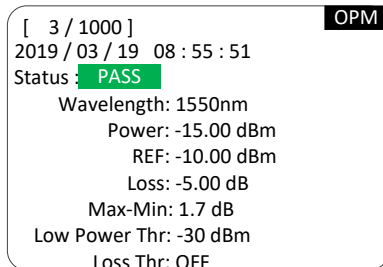

### Note

- Date: Refer to the saving date.
- Time: Refer to the saving time.
- Save to No.: Refer to data saving number.
- Status:
  - ----  
Without setting Low Power Thr. & Loss Thr.
  - **PASS**  
Measured value of optical power  $\geq$  Low Power Thr.  
Measured value of loss  $\leq$  Loss Thr.
  - **Low Power**  
Measured value of optical power  $<$  Threshold of low power
  - **Loss**  
Measured value of loss  $>$  Loss Thr.
- REF: Reference value can be saved if there is a reference value. However, the status of REF will be "OFF" if users don't set reference value.
- Loss: If there is a reference value, loss value will be saved. If there is no reference value, the status of Loss will be "--.--".
- MEAS: Without monitoring mode, the status of MEAS will be "OFF". With monitoring mode, the value will be displayed. (e.g., MAX-MIN: 1.7dB)

2. Press [↑] [↓] to select the data.

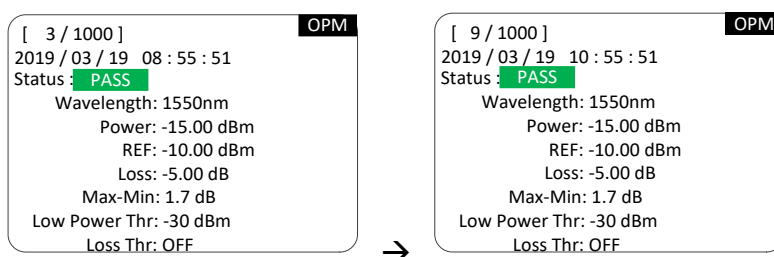


3. Press [ESC] to return to the display of optical power measurement.

### Note

On the display of loading measurement result, only [↑] [↓] [ESC] are available.




## 5.15 Device Setting

Short press [  ] key to access setting as below image.

<b>Date</b>	2019 / 07 / 19
Time	17 : 55 : 00
Power Saving	OFF
Screen Saving	OFF
Brightness	Mid
Battery Charge	OFF
Low Power Thr.	OFF
Loss Thr.	OFF
Device Info.	


### 5.15.1 Date

1. Press [↑] [↓] to move to "Date" and press [↵] to access year setting.
2. Press [↑] [↓] to select year and press [↵] to access month setting; press [ESC] to discard change and return to the original display.
3. Press [↑] [↓] to select month and press [↵] to access date setting; press [ESC] to discard change and return to access year setting.
4. Press [↑] [↓] to select date and press [↵] to confirm it; press [ESC] to discard change and return to access month setting.

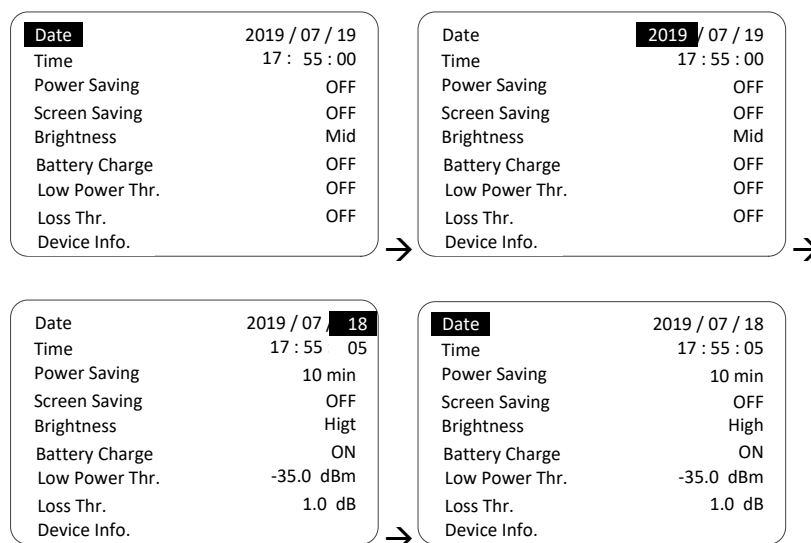


## 5.15.2 Time

1. Press [↑] [↓] to move to "Time" and press [↵] to access hour setting.
2. Press [↑] [↓] to select hour and press [↵] to access minute setting; press [ESC] to discard the change and return to the original display.
3. Press [↑] [↓] to select minute and press [↵] to access second setting; press [ESC] to discard the change and return to access hour setting.
4. Press [↑] [↓] to select second and press [↵] to confirm it; press [ESC] to discard change and return to access minute setting. (10 secs/unit)

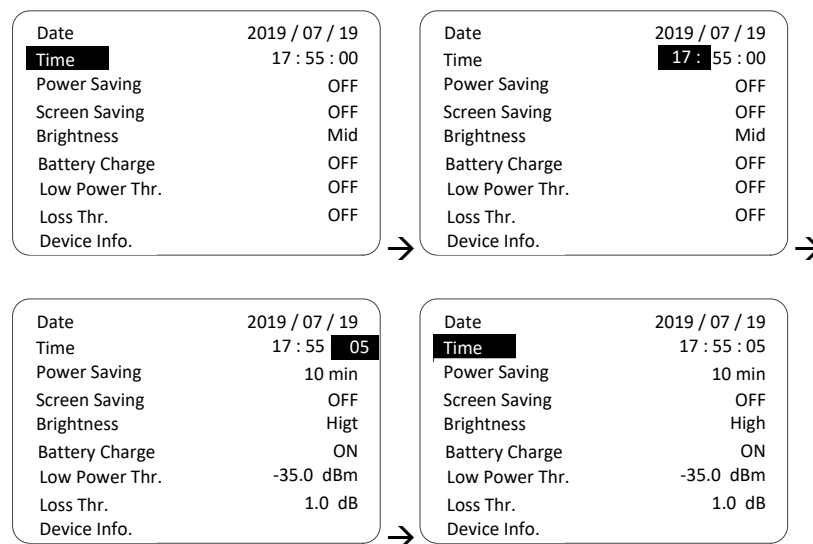


### 5.15.3 Power Saving (Default: 10 mins)

1. Press [↑] [↓] to move to "Power Saving" and press [↵] to set time.
2. Press [↑] [↓] to select time (OFF or 10 to 120 mins) (10 mins/interval) and press [↵] to confirm it; press [ESC] to discard the change and return to the original display.

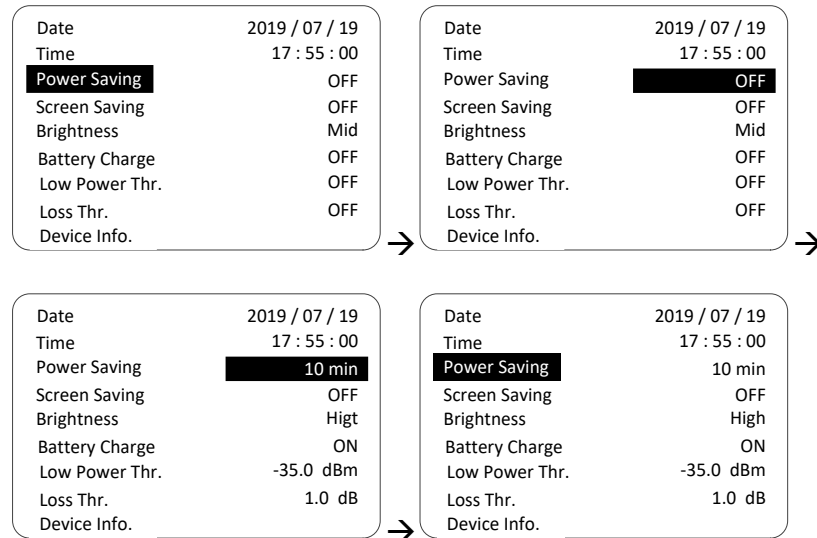


## 5.15.4 Screen Saving (Default: 5 mins)

1. Press [↑] [↓] to move to "Screen Saving" and press [↵] to access time interval setting.
2. Press [↑] [↓] to select time interval (OFF or 5 to 30 mins) (5 mins/interval) and press [↵] to confirm it; press [ESC] to discard change and return to the original display.

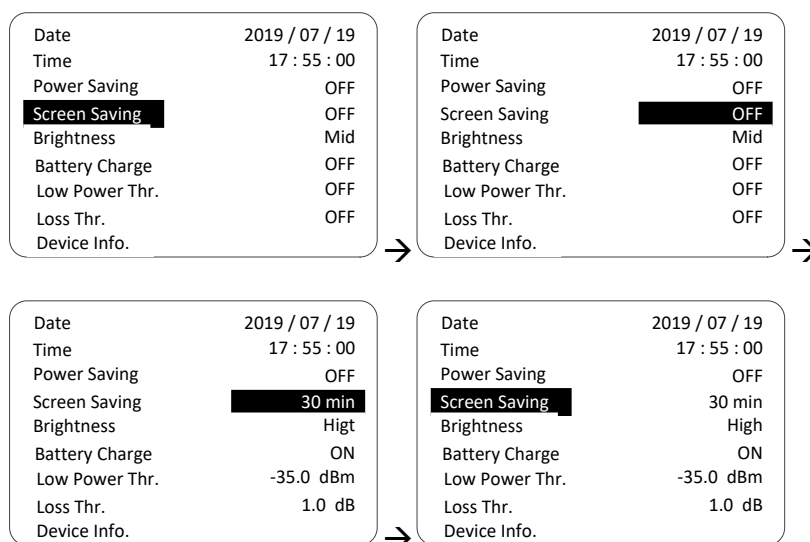


### 5.15.5 Brightness (Default: Mid)

1. Press [↑] [↓] to move to "Brightness" and press [↵] to access setting.
2. Press [↑] [↓] to select the brightness (High, Mid or Low) and press [↵] to confirm it; press [ESC] to discard the change and return to the original display.

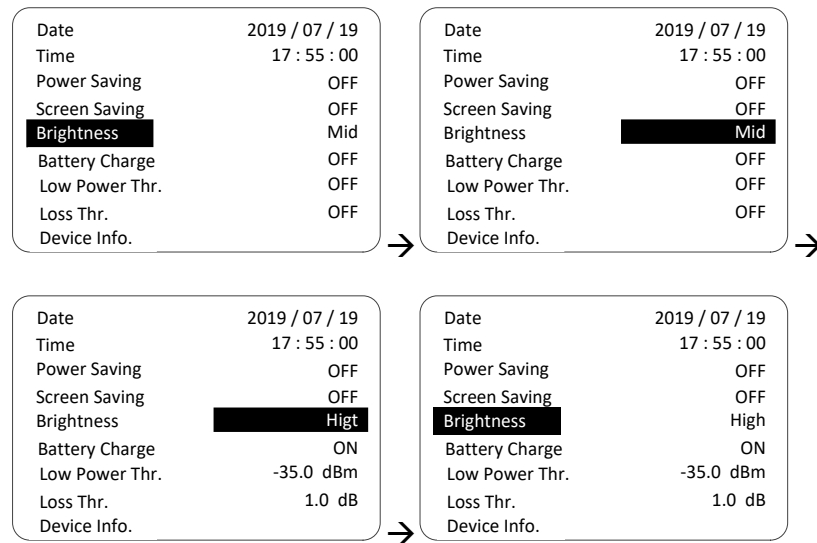

## 5.15.6 Battery Charge (Default: OFF)

1. Press [↑] [↓] to move to "Battery Charge" and press [↵] to access turning on/off battery charge.
2. Press [↑] [↓] to select turning on/off battery charge and press [↵] to confirm it; press [ESC] to discard the change and return to the original display.

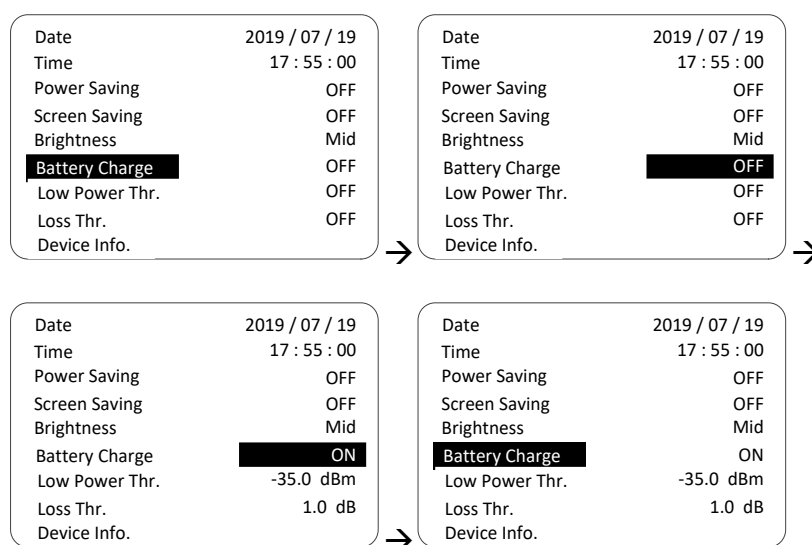

### Note

Users are required to confirm whether to turn on battery charge again after the device detects USB connection.


Use Rechargeable Battery ?

> No , Don' t Charge

Yes , Start Carging

### 5.15.7 Low Power Thr. (Default: -30dBm)

1. Press [↑] [↓] to move to “Low Power Thr.” and press [↵] to access setting.
2. Press [↑] [↓] to select the low power threshold (OFF or 0 to -45 dBm) (1dBm/interval) and press [↵] to confirm it; press [ESC] to discard the change and return to the original display.

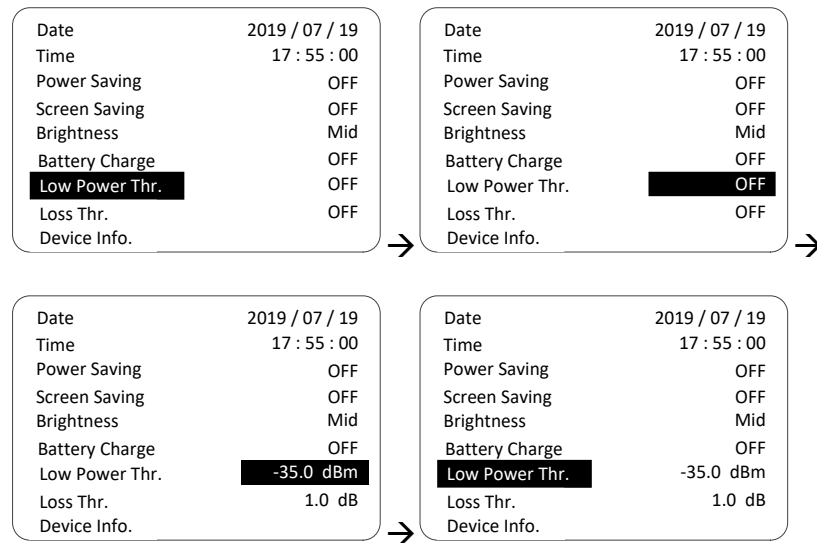


#### Note

“**Low Power**” will be displayed if the measured value of optical power is less than low power threshold. The Pass/Fail LED indicator on the device will be red.

### 5.15.8 Loss Thr. (Default: 3dB)

1. Press [↑] [↓] to move to “Loss Thr.” and press [↵] to set the threshold.
2. Press [↑] [↓] to select the threshold (OFF or 1 to 5 dB) (0.5dB/interval) and press [↵] to confirm it; press [ESC] to discard the change and return to the original display.

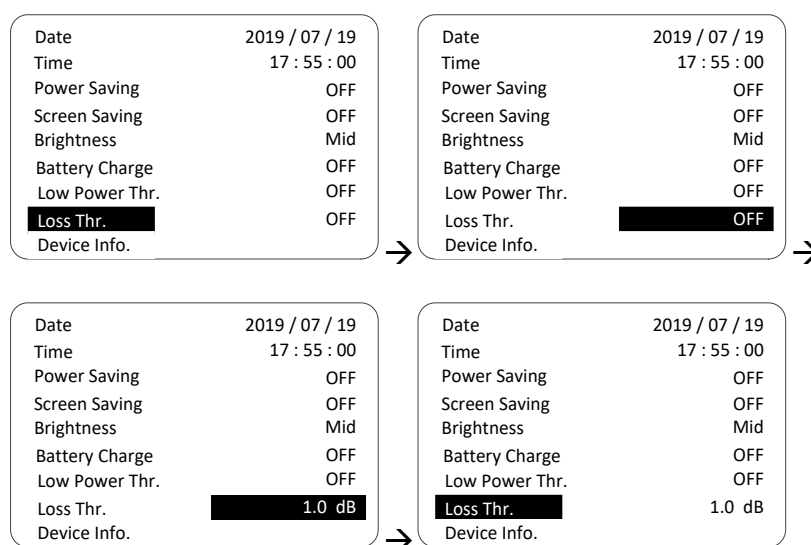

#### Note

“**Loss**” will be displayed if the value measured with long wavelength and the value measured with short wavelength are all higher than loss threshold. The Pass/Fail LED indicator on the device will be red.



### 5.15.9 Device Info.

Press [↑] [↓] to move to "Device Info" and press [↵] to view device information.

