



Ascentac CleMate400 Series, Optical Fiber Cleaner, is a perfect accessory to maintain and guarantee good quality of fiber-optic connector end-face. Users can achieve high quality cleaning without alcohol or other solvents. Ascentac CleMate400 Series efficiently cleans the end-face without nicking or scratching the surface.

Optical Fiber Cleaner

Ascentac CleMate 400

Above 400 Times Cleaning & Replaceable Cartridge

| Feature

- For all kinds of simplex connectors
- Compact and one-handed design
- Dry-cleaning without alcohol or other solvents
- Replaceable cartridge with 400+ swipes
- Automatic fixed length of cartridge, no cross-contamination concerns
- Complied with IPC8497-1, guaranteed cleaning performance
- ESD-controlled fabric complied with DIN54345:1995, no electrostatic transferring issue

Application

- Fiber-optic connector end-face cleaning

Description

CleMate 400 Complied with Industry Standards

- IPC 8497-1
- Telcordia GR-63
- DIN54345:1995
- RoHS: 2002/95/EC RoHS: 2002/95/EC



Structure

- 1 Switch handle
- 2 Cover
- 3 Cartridge



Easy to Use




- 1 Press the red switch handle first and you will see two cleaning slots.



- 2 Turn the fiber-optic connector end-face to face one of the slot and slowly slide the connector down.

Raise & rotate the connector 90 degree and move to the other slot. Repeat the same process above in this step.

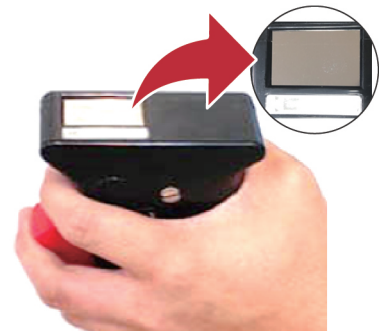

- 3 Loosen the red switch handle. The cover will close.

Easy to Replace



- 1 Use a flat screwdriver or a coin to loosen the screws



- 2 Remove the used cartridge and insert a new one properly



- 3 Use a flat screwdriver or a coin to tighten the screw

Specification

Optical Fiber Cleaner		
Model	CleMate410	CleMate420
Type	Reusable Cleaner	Cartridge
Connector	Any Connector	
Cleaning Slot	1 or 2	
Cleaning Time	400+ times/pc	
Material	75% Polyester, 25% Nylon	
Size (H x W x D) (mm)	100 x 135 x 35	80 x 120 x 25
Weight (g)	130	47

Ordering Information

CleMate 02-004X X

Type 

- 1 : Reusable Cleaner (Cartridge is replaceable.)
- 2 : Cartridge

 Connector

- 1 : Any connector, one cleaning slot
- 2 : Any connector, two cleaning slots

Example : CleMate 02-00411



© Copyright 2025 Ascentac. All rights reserved. The information in this document is subject to change without notice.

For the latest information regarding this product, please visit our website at <http://www.ascentac.com>



Contact us